

ASSEMBLY INSTRUCTIONS

CROWNMARK : B4300
TWIN (4+0)

(Box 1)
BOX OF HEADBOARD & FOOTBOARD

| No | ITEM | Qty |
|----|-------------------------------------|-------|
| A | Headboard | 1 pc |
| B | Headboard Leg (L/R) Nail Leg 770 | 2 pcs |
| C | Footboard | 1 pc |
| D | Bed Slats | 4 pcs |


(Box 2)
BOX OF SIDE RAIL

| No | ITEM | Qty |
|----|-----------|-------|
| E | Side Rail | 2 pcs |


(Box 1)
BOX OF HEADBOARD & FOOTBOARD

| No | ITEM | Qty |
|----|--|-------|
| 1 | JCBC M6 x 30mm | 6 pcs |
| 2 | SPRING WASHER 1/4" Rbw | 6 pcs |
| 3 | Flat Washer 1/4"ID x 13mmOD Blk | 6 pcs |
| 4 | ALLEN KEY m4x65mm Blk | 1 pc |
| 5 | Csk M4 x 32mm | 8 pcs |
| 6 | ALLEN KEY m5x65mm Blk | 1 pc |
| 7 | 12V=12W+1A Adaptor With ETL Certificate (US/INSIDE THE BOX WITH RED LABEL) | 1 pc |

STEP 1 : Attach Headboard Leg (C) to Headboard (A) as shown using JCBC BOLT (1) with Spring Washer (2), Flat washer (3) and securing with ALLEN KEY (4).

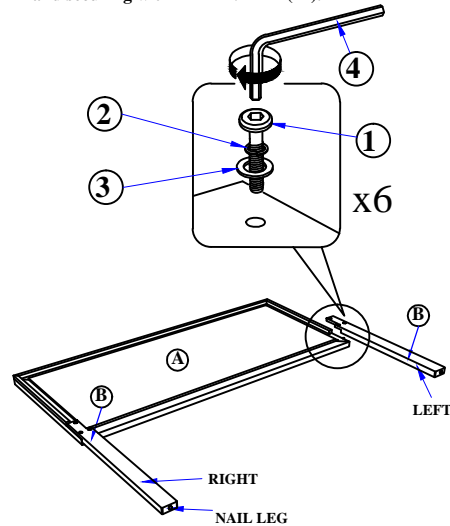



STEP 2 : Hook SIDE RAIL (F) TO HEADBOARD (A) closely and push down to fit. repeat step 2 with other end of rail to hook onto FOOTBOARD (C).

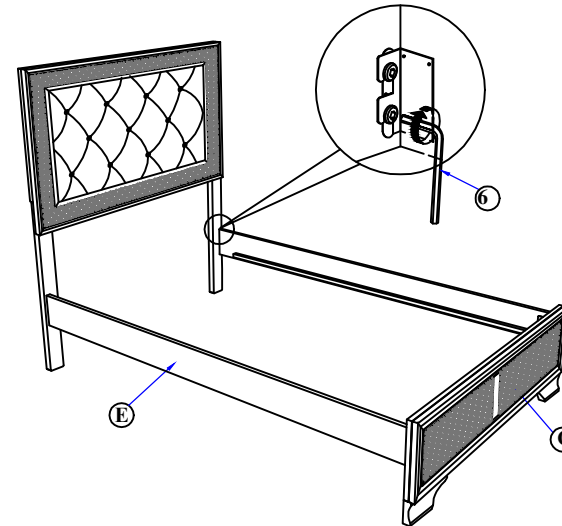

STEP 3 : Tighten the 4 Corner with Allen Key (6) as shown . Install the bed slat (D) to side rail (E) and tighten with Csk Screw (5) as per diagram shown. (NOTE: THE SETUP MUST DONE AT THE DECIDED LOCATION FOR THE BED TO OBTAIN PERFECT STABILITY)

STEP 3.2 :

STEP 3.4 :

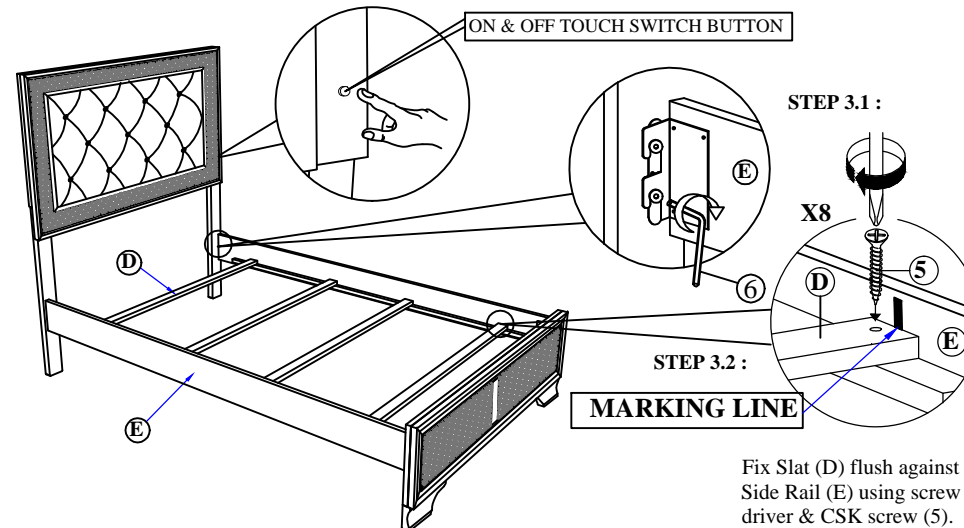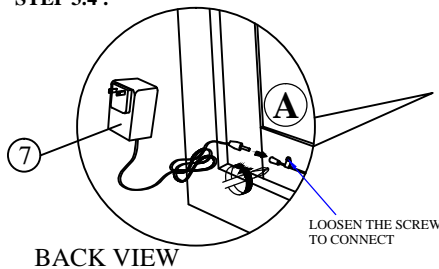

Fix Slat (D) flush against Side Rail (E) using screw driver & CSK screw (5).

NOTE : MUST TIGHTEN SCREWS PERIODCALLY OR SCREWS WILL BECOME LOOSE.CHECK TIGHTNESS OF ALL SCREWS EVERY 6-8 WEEKS.